

HUXCleaner™

In-Adaptor Ferrule Cleaner

Special Features

- Pen Type : First in the World (Patented)
- Very usefully device to clean Fiber Optic Ferrule inside of Adaptor in field
- Over 500 wipes by one HUXCleaner
- Best Cleaning Effect
- Cleaning Cost Save
- No need open the Frame to clean the Ferrule inside of Adaptor
- Used advanced cleaning fabric which has better suction oil and dust than present swabs
- Easy and Simple and Pocket Portable
- Windows for showing the remain cleaning times
- Any customer size ferrule/stub available like Transceiver, LEMO, E2000.....



Specifications

Brand Name	HUXCleaner
No. of cleaning times by one HUXCleaner	over 500 wipes
Housing Material	Plastic
Tip Material	Plastic/basic ¹ or Metal/option
Cleaning Fabric	Special Yarn
Length (included Cap)	145mm
Packing	Individual
Refill	None

¹ The plastic Tip version is basic type to ship unless the customer ask metal Tip optionally.


How To Clean :

1. Insert HUXCleaner Tip into Adaptor and push the Ferrule.
2. Turn Rotator 1~2 clicks clockwise.

Ordering Information :

- HUXCleaner-2.5 : For SC, FC, ST with Plastic Tip
- HUXCleaner-1.25 : For LC, MU with Plastic Tip
- HUXCleaner-2.5E : For SC, FC, ST, E2000 Type
- HUXCleaner-2.0 : For 2.0mm LEMO Type
- HUXCleaner-1.5 : For 1.5mm Military use
- HUXCleaner-3.2 : For 3.2mm SMA Type

[Note: We can make the Tip for any customer size Ferrule/Stub.]

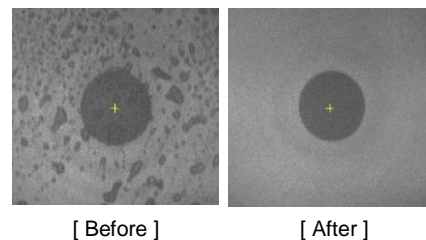

[Before]

[After]